



United Technologies
turn to the experts

● Indoor Error display For Other units

Malfunction	Timer Lamp	Operation Lamp (flashes)	Error Code
Indoor EEPROM malfunction	X	1	E0
Communication malfunction between indoor and outdoor units	X	2	E1
Indoor fan speed malfunction	X	4	E3
Open or short circuit of T1 temperature sensor	X	5	E4
Open or short circuit of T2 temperature sensor	X	6	E5
Water level alarm	X	8	EE
Overcurrent protection (For some units)	O	1	F0
Open or short circuit of T4 temperature sensor	O	2	F1
Open or short circuit of T3 temperature sensor	O	3	F2
Open or short circuit of T5 temperature sensor	O	4	F3
Outdoor EEPROM malfunction (For some units)	O	5	F4
Outdoor fan speed is out of control	O	6	F5
Open or short circuit of T2B temperature sensor (For free-match indoor units)	O	7	F6
Communication error between auto-lifting panel and slim cassette (For slim cassette with auto-lifting panel)	O	8	F7
Auto-lifting panel is faulty (For slim cassette with auto-lifting panel)	O	9	F8
Auto-lifting panel is not closed (For slim cassette with auto-lifting panel)	O	10	F9
IPM module malfunction	☆	1	P0
DC voltage is too high or too low	☆	2	P1
Too low ambient temperature protection	☆	4	P3
Error rotor position protection of compressor	☆	5	P4
Mode conflict	☆	6	P5
Compressor voltage protection	☆	7	P6
			O (on) X(off) ☆(flash at 2Hz)



United Technologies
turn to the experts

● *Outdoor Error display*

Display	LED STATUS
E0	Outdoor EEPROM malfunction
E2	Indoor / outdoor units communication error
E3	Communication malfunction between IPM board and outdoor main board
E4	Open or short circuit of outdoor unit temperature sensor
E5	Voltage protection
E8	Outdoor fan speed malfunction
F1	No A Indoor unit coil outlet temperature sensor or connector of sensor is defective
F2	No B Indoor unit coil outlet temperature sensor or connector of sensor is defective
F3	No C Indoor unit coil outlet temperature sensor or connector of sensor is defective
F4	No D Indoor unit coil outlet temperature sensor or connector of sensor is defective
F5	No E Indoor unit coil outlet temperature sensor or connector of sensor is defective
P1	High pressure protection (ForM40E-28HFN1-Q, M40B-36HFN1-Q, M50E-42HFN1-Q)
P2	Low pressure protection (ForM40E-28HFN1-Q, M40B-36HFN1-Q, M50E-42HFN1-Q)
P3	Current protection of compressor
P4	Temperature protection of compressor discharge
P5	High temperature protection of condenser
P6	IPM module protection